



# HOW TO CONNECT YOUR WII TO THE INTERNET: WIRELESS

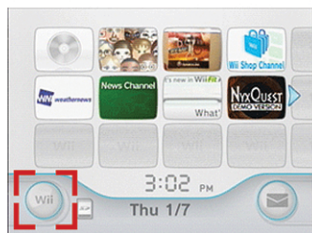



From your Wii's main menu, select the **Wii** button.




Select **Wii Settings** to access the **Wii System Settings** menu.

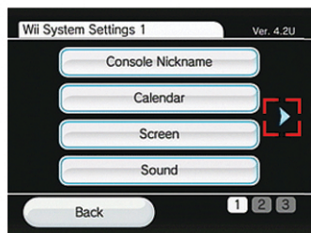


Use the arrow on the right side of the screen to scroll to page two and select **Internet**.

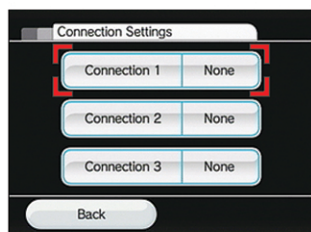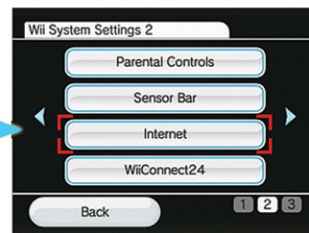



Select **Connection 1: None**.

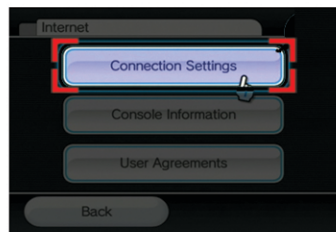

Select **Connection Settings**.

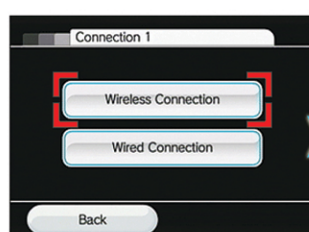


Click on **Wireless Connection** and then **Search for an Access Point**.

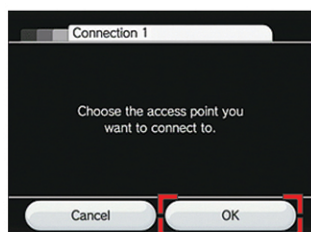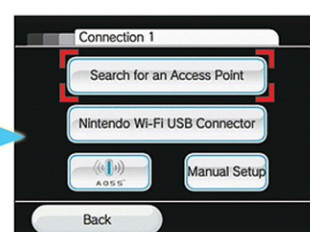


Select **OK** and the Wii will display all the wireless networks it finds.



Select your wireless network. Your network may ask you for your password.

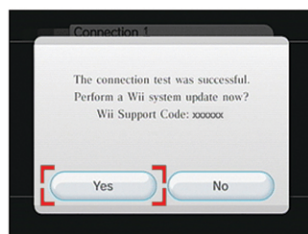

Test your connection, then click **YES** to update your Wii

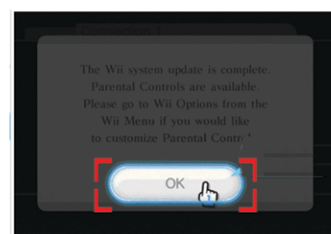

Read and accept the user agreement, click **OK**, and you should be connected!

## IF YOUR INTERNET CONNECTION ISN'T WIRELESS...

...you'll need a **Wii LAN Adapter** in order to connect.

The **Wii LAN Adapter** is available only through Nintendo. Residents of the U.S. and Canada can purchase the **Wii LAN Adapter** from Nintendo's Online Store: [store.nintendo.com](http://store.nintendo.com)

You can use a **Visa** or **MasterCard**, or print out a mail-in form and send in a check or money order, or call Nintendo's Consumer Service Department at 1-800-255-3700 to order over the phone with a **Visa** or **MasterCard**. On the bright side, you can then ignore steps 7-10 above when connecting!

